



ShoreHeat Heat Pump Installation Guide v1

We hope this short guide will help prepare you for the installation of your ShoreHeat heat pump.

Location

The heat pump is installed OUTSIDE (away from foliage) between 1.5m – 2.0m from the hot tub. Figure 9 below illustrates minimum obstruction distances. The heat pump will not work efficiently in a confined space.

Electrical Supply

We supply and install the electrical supply to the heat pump from your hot tub. The electrical supply to your hot tub will need to be 30amp minimum. If you are unsure, check with your electrician about the supply you have.

Base

A suitable, level & hard base (slabs or concrete) with minimum dimensions of 1m x 0.5m will be required to place the heat pump on. The base (see figure 10) should allow the heat pump to be positioned so as not to be obstructed.

Technical specifications of the ShoreHeat heat pump: -

Dimensions: 990mm x 380mm x 560mm

Weight: 45kg

Power Supply: 5amp

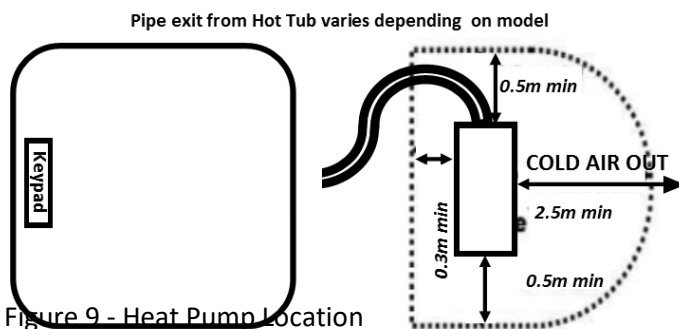


Figure 10 – Heat Pump Base

IMPORTANT NOTE:

Please be advised that return visits due to non-preparation of base, poor access, unsuitable ground or obstacles, unsuitable electrical, etc are chargeable at the Company's hourly rate.

If you are in any doubts with suitability, please contact us.